




### WARNING:


This Quick Reference Guide is not a substitute for reading and following the operator's manual. To reduce the risk of serious injury, user must read and understand the operator's manual before using this product.

## QUICK SETUP


- 1 Install the upper handle unit**  
Slide the handle assembly onto the frame. Align holes in the top handle with the mounting holes in the handle assembly. Secure with saddle bolts and knobs.

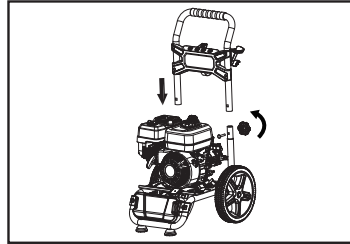

- 2 Insert quick-connect nozzles on the bracket of the upper handle unit.**

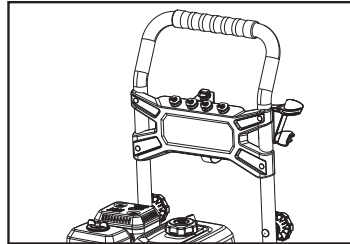


- 3 Attach the high pressure hose onto the hose hanger strap.**

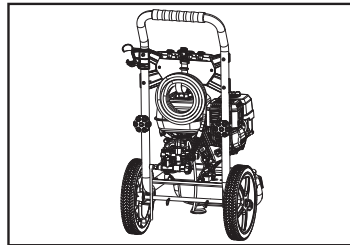


## QUICK START


- 1 Connect High Pressure Hose to Pump**  
Take out the high pressure hose from the hose holder, uncoil high pressure hose and attach one end of hose to high pressure outlet on pump. Tighten by hand.

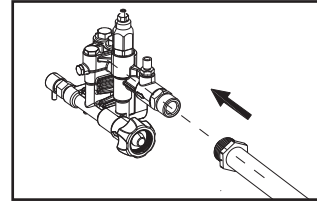


- 2 Attach other end of high pressure hose to base of spray gun. Tighten by hand.**

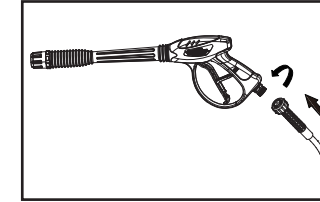


- 3 Attach the spray wand into spray gun.**  
Turn OFF the water and set trigger to locked position. Point the spray gun at a safety direction and make sure trigger is locked and can't be squeezed.

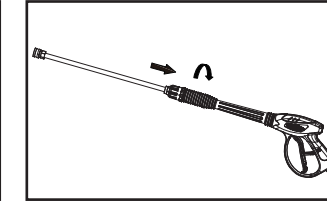


- 4 Choose the quick-connect nozzle you want to use, pull back on collar of spray wand, insert the nozzle and release collar.**  
Tug on the nozzle to make sure it is securely in place. More information please see "How to Use Quick-Connect Nozzles" section.

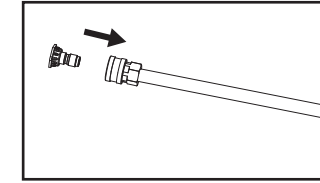


- 5 Push engine rocker switch to ON position.**

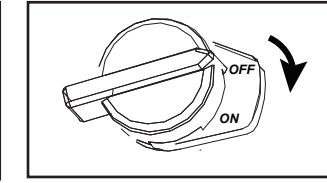


- 6 To start a cold engine, move the choke lever to "CLOSED" position.**

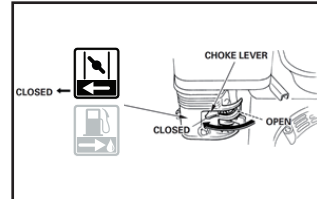


- 7 Move the fuel valve lever to "ON" position (Lever in right position).**

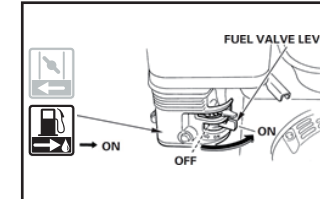


- 8 Move the throttle lever away from the MIN. position (symbol tortoise), about 1/3 of the way toward the MAX. position (symbol rabbit).**

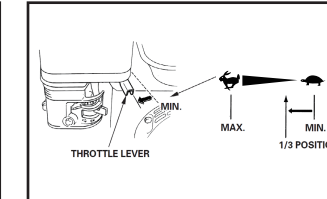


- 9 Pull the recoil starter grip to start the engine.**

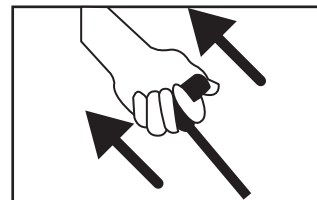

- 10 Gradually move the choke to the OPEN position after engine starts.**

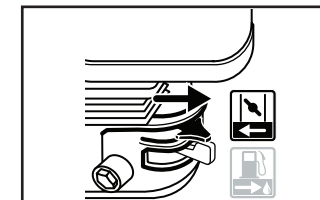

- 11 Move the throttle lever to the MAX. position.**

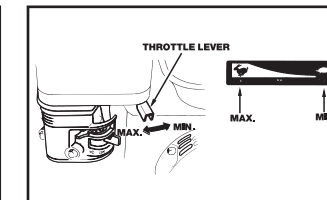

1-866-902-9690

Our Customer Service staff is ready to provide assistance. In the case of a damaged or missing part, most replacement parts ship directly from Merotec USA in Atlanta or from one of our service partners in the US. For immediate help with assembly, or additional product information, please email [support@MerotecUSA.com](mailto:support@MerotecUSA.com) or call 866-902-9690 M-F 8:30am – 5:00pm ET. More information can be found on [www.YardForceUSA.com](http://www.YardForceUSA.com)